



PT22-221 02 183 FE-A 0101
2 08 01 20 015 00 00 FE-A 0101
Processor

SHOWA DENGYO SHA CO.,LTD KENTAC-980

13
Port Peraga FE

2
Indikator

1
Saklar Utama

5
LED Halt

11
Switch Interupsi

6. Konektor KBoard

3
SW1
Saklar Reset

12
Port Peraga
FC

AC220V

KENTAC 800Z Mark II

980

IC1 TCA1045NP
IC2 TCA1045NP
IC3 TCA1045NP
IC4 TCA1045NP
IC5 TCA5048P
IC6 TCA0718P

RA1 RA2 RA3

CM1

H bit

L bit

0 08
1 07
2 06
3 05
4 04
5 03
6 02
7 01

H bit

L bit

0 016
1 015
2 014
3 013
4 012
5 011
6 010
7 09

PT25.221.02.155.FE-A-01/01
2.08.01.20.035.00.00.FE-A-01/01
Processor

H bit

L bit

0 024
1 023
2 022
3 021
4 020
5 019
6 018
7 017

R1 R2 R3 R4 R5 R6

KENTAC 800Z Mark II

IF 4

416

IF 4

416

980

IC1
TCA0459P

IC2
TCA0459P

IC3
TCA0459P

IC4
TCA0459P

IC5
TCA5048P

IC6
TCA0718P

RA1

RA2

RA3

RA4

RA5

RA6

RA7

RA8

RA9

RA10

RA11

RA12

RA13

RA14

RA15

RA16

RA17

RA18

RA19

RA20

RA21

RA22

RA23

RA24

RA25

RA26

RA27

RA28

RA29

RA30

RA31

RA32

RA33

RA34

RA35

RA36

RA37

RA38

RA39

RA40

RA41

RA42

RA43

RA44

RA45

RA46

RA47

RA48

RA49

RA50

RA51

RA52

RA53

RA54

RA55

RA56

RA57

RA58

RA59

RA60

RA61

RA62

RA63

RA64

RA65

RA66

RA67

RA68

RA69

RA70

RA71

RA72

RA73

RA74

RA75

RA76

RA77

RA78

RA79

RA80

RA81

RA82

RA83

RA84

RA85

RA86

RA87

RA88

RA89

RA90

RA91

RA92

RA93

RA94

RA95

RA96

RA97

RA98

RA99

RA100

H bit

01

02

03

04

05

06

07

08

F E

L bit

0

1

2

3

4

5

6

7

H bit

09

10

11

12

13

14

15

16

F D

L bit

0

1

2

3

4

5

6

7

PT25.221.02.155.FE-A-01/01
 2.08.01.20.035.00.00.FE-A-01/01
 Processor

H bit

017

018

019

020

021

022

023

024

L bit

0

1

2

3

4

5

6

7

R1

R2

R3

R4

R5

R6

KENTAC 800Z Mark II

IF 4

416

IF 4

416